DJ68-00054K 2002.1.30 11:22 AM ˘ ` 1

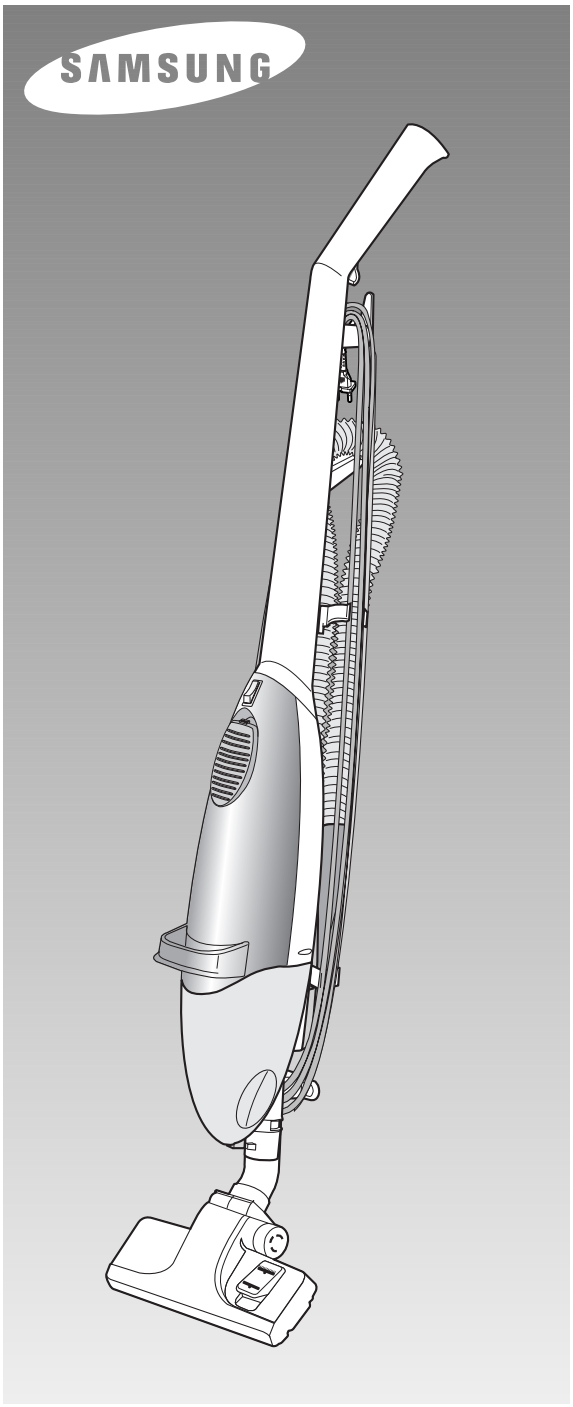

Vacuum Cleaner

For Household use Only

Operating Instructions

Read this manual before operating the cleaner

VC-S110
VC-S112V

❊ The design and specification may be different depending on the models.

DJ68-00054K 2002.1.30 11:22 AM ˘ ` 2

IMPORTANT SAFEGUARDS

Thank you for purchasing a Samsung vacuum cleaner. When using an electrical appliance, basic precautions should always be followed, including the following:

PLEASE READ ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS APPLIANCE.

WARNING:

To reduce the risk of fire, electric shock, or injury:

- Do not leave appliance unattended when plugged in. Unplug the vacuum from the outlet when it is not in use, or when it is being cleaned.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, or has been dropped, damaged, left outdoors or dropped in water, take it to a service center.
- Do not pull or carry the vacuum by the cord, or use the cord as a handle. Do not close a door on cord, or pull the cord around sharp edges or corners. Do not run the appliance over its cord. Keep the cord away from heated surfaces.
- Do not unplug the vacuum by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into vacuum openings. Do not operate with any opening blocked: keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dirt filter and filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to clean up flammable or combustible liquids such as gasoline. Do not use the vacuum in areas where such liquids may be present.
- Store your cleaner indoors in a cool, dry area.
- Do not use extension cords or plug into an electrical outlet with inadequate current carrying capacity.
- Avoid vacuuming up sharp objects.
- Always turn this appliance off before cleaning filters or removing the bottom plate for maintenance.
- Unplug electrical appliances before vacuuming them.

SAVE THESE INSTRUCTIONS*!*

To reduce the risk of electrical shock, this appliance has a polarized plug with one blade wider than the other. This plug will fit in a polarized outlet only one way. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to replace the outlet.
Do not change the plug in any way.

DJ68-00054K 2002.1.30 11:22 AM ˘ ` 3

It is extremely important to read and follow all the instruction steps in order.

Attaching Handle



1 Slide handle firmly onto the top of the cleaner.

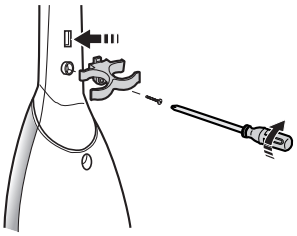

2 Connect the Hose Holder to the handle and tighten the screw securely with the screwdriver. (Optional)

Attaching Hose (Optional)

Put the hose on the Hose Hook and insert the crevice tool into the slot of the Air Guide.
Push the hose until it is locked in position.

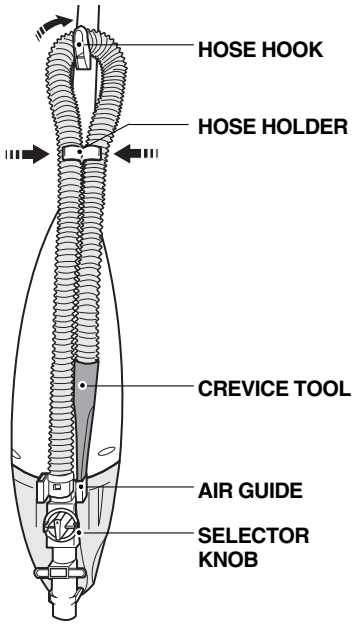

DJ68-00054K 2002.1.30 11:22 AM ` ` 4

Attaching Nozzle

Place nozzle into lower end of cleaner.
Align arrows.

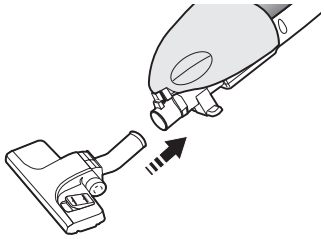

The Power Cord

Securing the Cord

1. Insert the power cord into the clip on the handle.
2. Wrap excess cord around the cord storage hooks to prevent the cord from dragging on the ground during cleaning or storage. The plug has a slot on one side to secure it to the cord.

Releasing the Cord

Rotate the upper cord hook downward for quick cord release.
Wind cord back onto hook when full length is not needed.

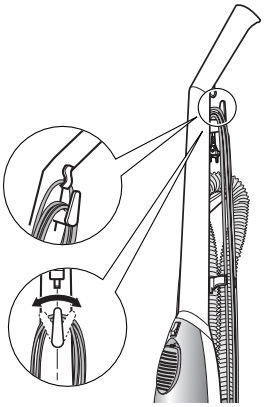

Assembled Vacuum Cleaner Parts

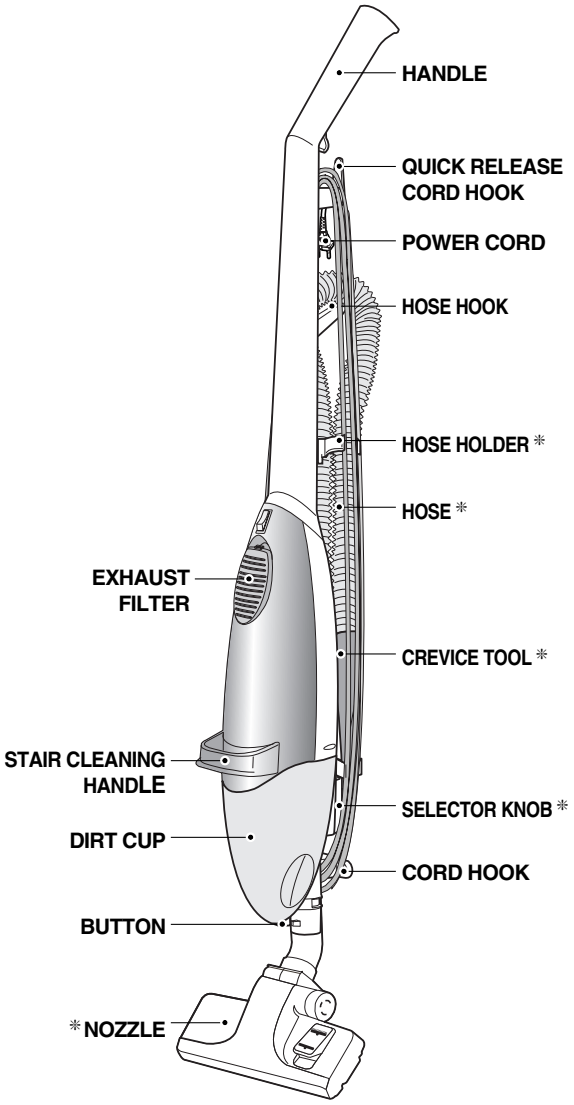

* The plug type may be different depending on the models. Features maked* may vary according to model.

ON-OFF switch (Optional)

Vacuuming power can be adjusted to suit different situations using the 3step switch.
LOW (**I**) = For delicate fabrics, like curtains.
HIGH(**II**) = For difficult floors and heavily soiled carpets.
OFF (**O**) = Vacuum cleaner switch off

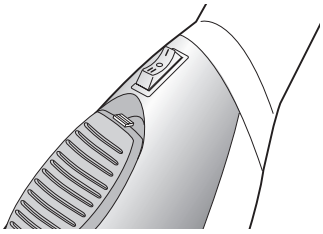

To turn cleaner ON(I), depress switch toward front,
To the OFF(O), depress switch toward back.

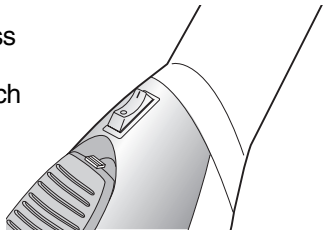

Stair Cleaning Handle

Use the convenience handle for easy stair cleaning or better control in some areas.

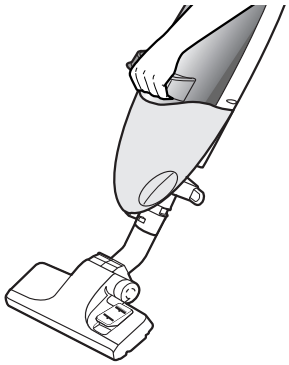

Using the Nozzle (Optional)

Turn the Selector Knob left or right and align the arrow to the nozzle mark on the Air Guide.

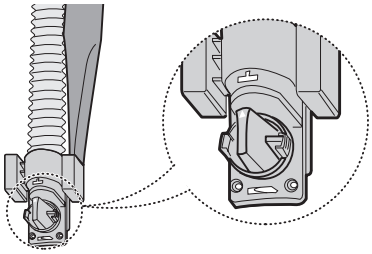

Using the Crevice Tool (Optional)

Turn the Selector Knob left or right and align the arrow to the Crevice Tool mark on the Air Guide.
Remove the Crevice Tool from the Air Guide slot and use as desired.

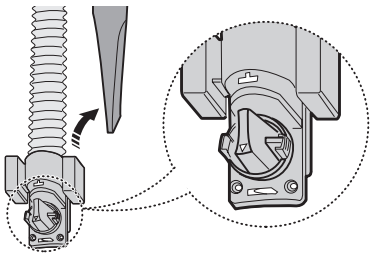

DJ68-00054K 2002.1.30 11:22 AM ˘ ` 6

Be sure to empty the dust cup and clean the dirt filter after each use to keep vacuum cleaner operating efficiently. The inlet filter must be securely attached before using. Failure to replace the inlet filter will allow dirt to enter motor section which will damage the vacuum cleaner.

Emptying the Dirt Cup

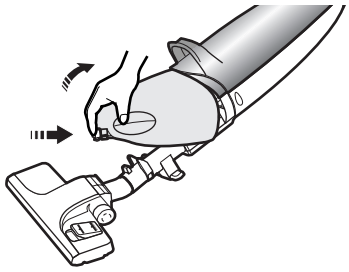

1 Push button up and pull out dirt cup.

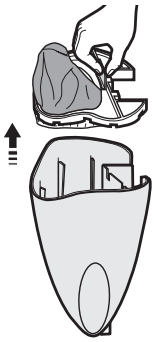

2 Remove dirt filter from dirt cup and empty contents.

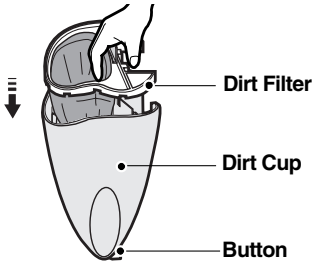

3 Align and push dirt filter into top of dirt cup. Be sure dirt filter is inside cup and seated on the ribs.

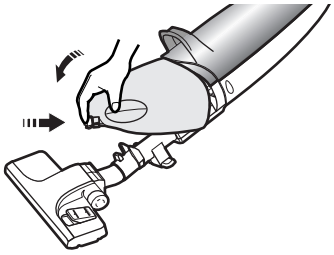

4 Slide the top of dirt cup into place and press the dirt cup downward. Push button up and lock dirt cup into place.

DJ68-00054K 2002.1.30 11:22 AM ˘ ` 7

The Dirt Filter / The Exhaust Filter

Clean filters after each use. If filters need further cleaning, launder them in warm water using a mild detergent.
Air dry thoroughly before replacing filters into cleaner. if filters are damaged or extremely soiled replace them.

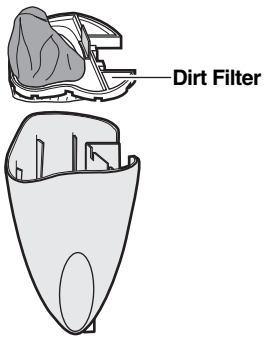

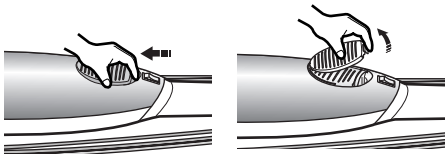

1 Pull open the filter compartment.

2 Peel the filter off of the grid.

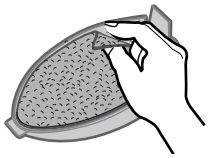

The Inlet Filter

The inlet filter removes dust and dirt from the air that circulates in the vacuum. The inlet filter is not reusable, and should be checked once a year for replacement.

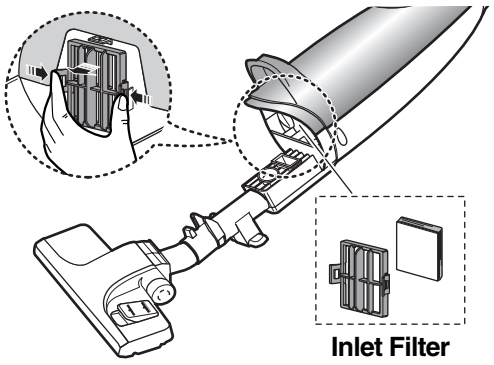

DJ68-00054K 2002.1.30 11:22 AM ˘ ` 8

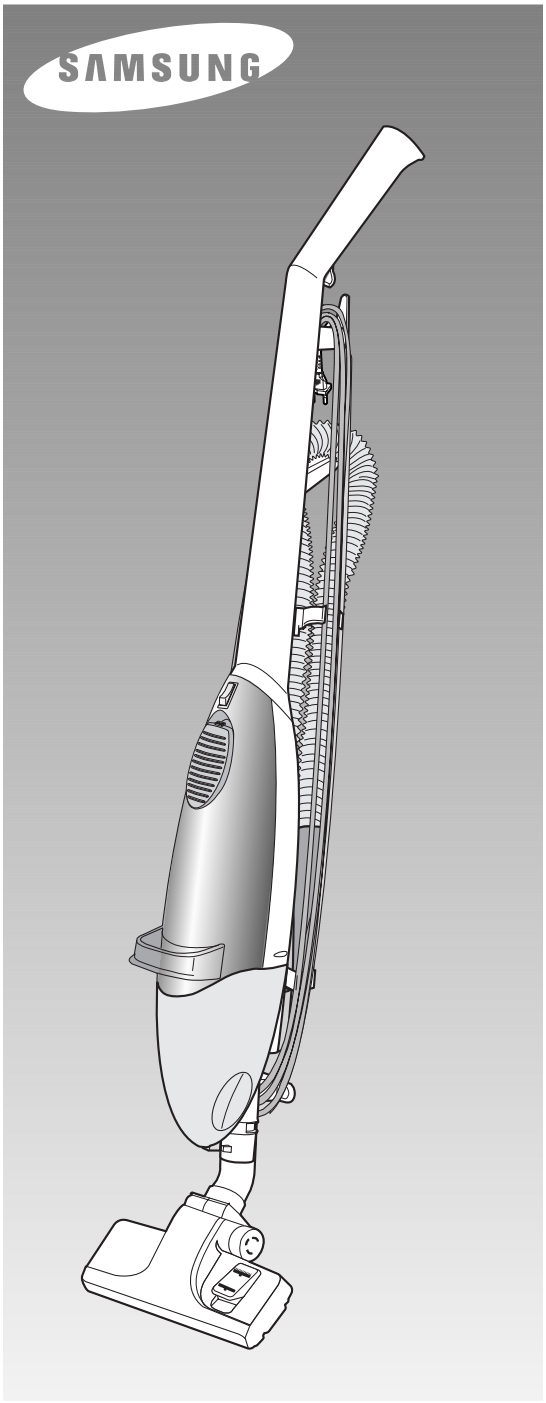

المكنسة الكهربائية

الخاصة بالاستخدام
في المنزل فقس

تعليمات التشغيل

الرجاء قراءة هذه
التعليمات بعناية قبل
تشغيل المكنسة.

❋ التصميم والمواصفات قد تختلف حسب الموديلات.

تعليمات هامة من أجل السلامة

شكرا لكم على شراء مكنسة كهربائية من سامسونج . عند استخدام الجهاز الالكتروني، لا بد من إتباع التحذيرات الأساسية دائما ، بما فيها التعليمات التالية :

يرجى قراءة جميع التنبيهات والتعليمات قبل استخدام هذا الجهاز.

تنبيهات :

لخفض خطر الاحتراق، والصدمات الكهربائية ، أو الجرح :

- لا تترك الجهاز موصولا الى مخرج التيار عند غيابك. افصل قابس المكنسة عن مخرج التيار عند عدم استخدامها ، أو تنظيف المكنسة.
- لا تستخدم المكنسة خارج البيت أو على الأسطح البالة.
- لا تسمح بالعبث بها كلعبة . خذ العناية العميقة في حالة استخدامها من قبل أو قريب من الأطفال.
- استخدم المكنسة كما هو مبين في هذا الدليل. استخدم الملحقات الموصى بها من قبل الصانع.
- لا تستخدم المكنسة بالسلك أو القابس المتضرر . إذا لم يعمل الجهاز كما ينبغي، أو سقطت المكنسة، أو حدث ضرر فيها ، أو تركها خارج البيت أو سقطتها في الماء ، خذها الى مركز الخدمات.
- لا تسحب أو تنقل المكنسة بسلك التيار ، أو لا تستخدم السلك كمقبض. لا تغلق الباب على السلك، أو تسحب السلك حول الأطراف أو الزوايا الحادة. لا تستخدم الجهاز على سلك التيار . احفظ السلك بعيدا عن الأسطح الساخنة.
- لا تفصل قابس المكنسة بإمساك السلك. لفصل القابس، امسك القابس بنفسه ، ولا السلك.
- لا تمسك القابس أو الجهاز باليد المبللة.
- لا تضع أي شيء في فتحات المكنسة. لا تستخدم المكنسة مع الفتحات المسدودة: احفظ المكنسة خالية من الغبار ، النسيل ، الشعر وأي شيء قد يخفض سير الهواء.
- احفظ الشعر ، والملابس المتدلية ، الأصابع وجميع الأجزاء من الجسم بعيدا عن الفتحات والقطع المتحركة.
- لا تستخدم المكنسة لالتقاط أي شيء مشتعل أو متبخر ، مثل السجائر ، وثقاب العود ، والرماد الحار .
- لا تستخدم المكنسة بدون مصفاة الغبار وعدم وضع المصفاة في مكانها.
- أوقف الضوابط قبل فصل القابس.
- استخدم المكنسة بالعناية الكبيرة في حالة تنظيف السلم.
- لا تستخدم المكنسة لتنظيف السوائل القابلة للاشتعال أو الانفجار مثل الغازولين . لا تستخدم المكنسة في المناطق التي هناك فيها هذه السوائل.
- احفظ المكنسة داخل البيت في مكان بارد ، وجاف.
- لا تستخدم الأسلاك الإضافية وتوصل القابس الى مخرج التيار الذي تياره غير مناسب.
- تجنب تنظيف الأشياء الحادة بالمكنسة.
- اوقف هذا الجهاز دائما قبل تنظيف المصافي أو سحب الصفيحة السفلى للصيانة.
- افصل قابس الأجهزة الكهربائية قبل تنظيفها بالمكنسة الكهربائية.

احفظ هذه التعليمات!

لخفض خطر الصدمات الكهربائية، هذا الجهاز له قابس قطبي مع إحدى ريشات أعرض من الأخرى. هذا القابس مناسب لمخرج التيار القطبي باتجاه واحدة. إذا كان القابس غير مناسب للمخرج، قلب القابس . إذا ما زال كان غير مناسب، اتصل بالفني الكهربائي المؤهل لتبديل المخرج. لا تغير القابس بأي طريقة.

VC-S112-ARB 1 2/10/09, 1:16 PM

الأجزاء التي يتم تجميعها

من المهم جدا قراءة جميع الخطوات للتعليمات وتبعها بالترتيب.

تجميع المقبض



١ ازلق المقبض بثبتات الى أعلى المكنسة.

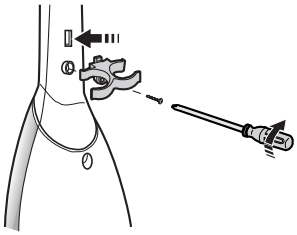

٢ وصل حامل المقبض الى المقبض وثبت برغى التثبيت بواسطة مفك برغى . (اختياري).

تجميع الخرطوم (اختياري)

ضع الخرطوم على خطاف الخرطوم وادخل الأداة ذات شقوق الى فتحة ضيقة في دليل الهواء.

ادفع الخرطوم حتى يتم إغلاه في مكانه.

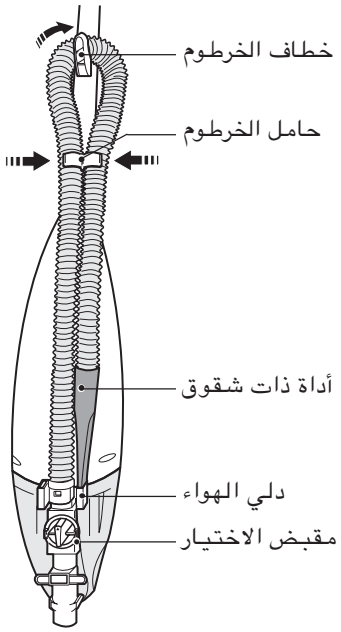

VC-S112-ARB 2 2/10/09, 1:16 PM

تجميع الفوهة

ضع الفوهة في أسفل النهاية من المكنسة.
ضعها باتجاه السهم.

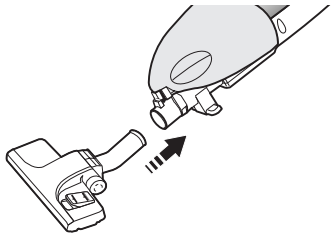

سلك التيار

تثبيت السلك

١ ادخل سلك التيار الى المشبك في المقبض.

٢ لف السلك الزائد حول خطاف حمل السلك لمنع السلك من سقوطه على الأرض أثناء التنظيف أو الحفظ. القابس له فتحة ضيقة في جانب واحد لتثبيته في السلك.

رخو السلك

دوّر خطاف السلك الأعلى الى الأسفل لرخو السلك السريع.
إعد لف السلك حول الخطاف في حالة أن طول السلك الكامل ليس ضروريا.

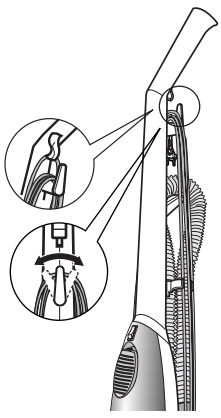

تعريف الأجزاء

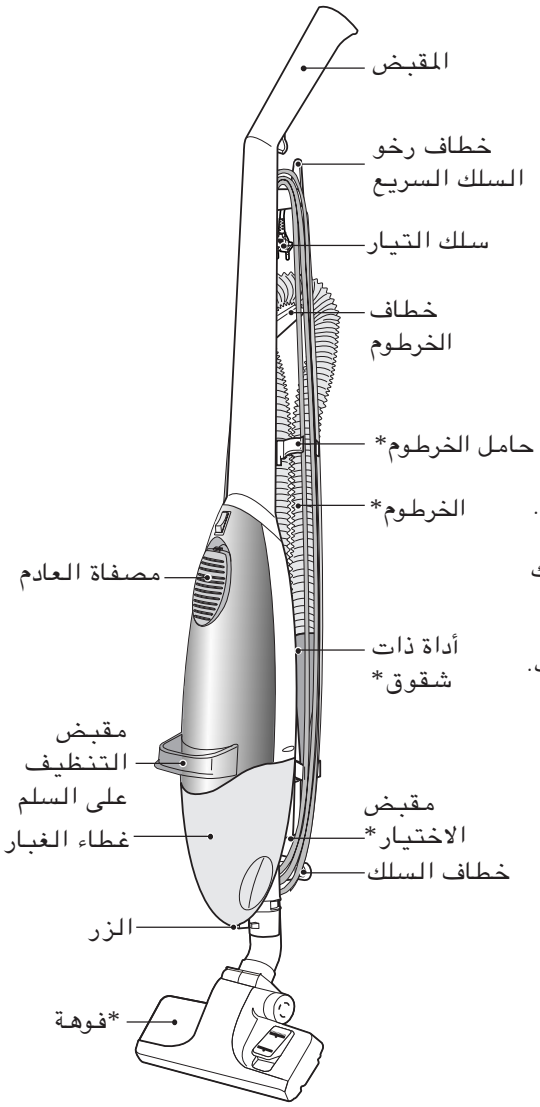

* نوع القابس قد يختلف حسب الموديل .
المزايا قد تختلف حسب الموديل.

زر التشغيل-الإيقاف (اختياري)

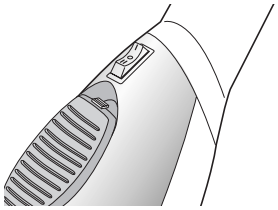

قوة الشفط يمكنك ضبطها مناسبة للأحوال المختلفة بواسطة زر ٣ خطوات.
منخفض (I) = للأقشمة الرقيقة ، مثل الستائر.
عالي(II) = للأرض الصعبة التنظيف والسجادة الثقيلة الوسخ.
الإيقاف(O) = تتوقف المكنسة الكهربائية.

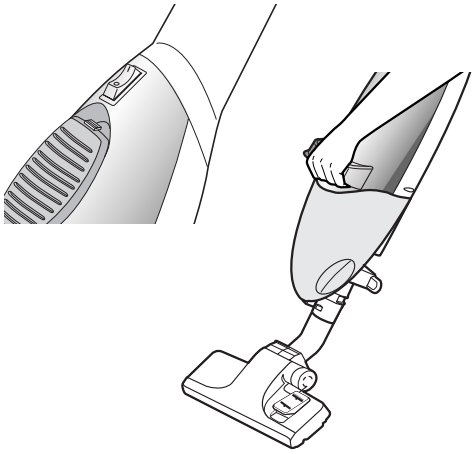

لتشغيل المكنسة (I) ، ادفع الزر الى الأمام.

لإيقاف المكنسة (O) ، ادفع الزر الى الخلف.

مقبض تنظيف السلم

استخدم المقبض المريح لتنظيف السلم بسهولة أو أفضل التحكم في بعض المناطق.

استخدام الفوهة (اختياري)

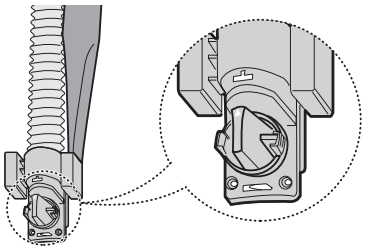

دوّر مقبض الاختيار الى اليسار أو اليمين وباتجاه السهم الى علامة الفوهة في دليل الهواء.

استخدام أداة ذات شقوق (اختياري)

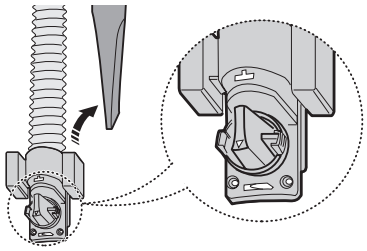

دوّر مقبض الاختيار الى اليسار أو اليمين مع السهم الى علامة أداة ذات شقوق في دليل الهواء.
ازل أداة ذات شقوق من فتحة دليل الهواء واستخدمها كما تريد.

VC-S112-ARB 4 2/10/09, 1:15 PM

الصيانة

تأكد من تفريغ غطاء الغبار ونظّف مصفاة الغبار بعد كل مرة من الاستخدام لاحتفاظ المكنسة الكهربائية بكفاءة التشغيل. ولا بد من تثبيت مصفاة المدخل قبل الاستخدام. إذا فشلت في تبديل مصفاة المدخل ، يدخل الغبار الى جزء المحرك الذي يؤذي الى إحداث ضرر في المكنسة الكهربائية.

تفريغ غطاء الغبار

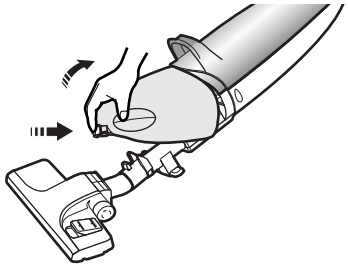

١ اضغط على الزر واخرج غطاء الغبار.

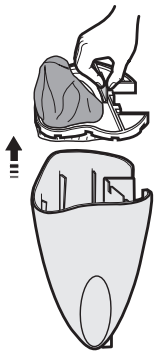

٢ ازل مصفاة الغبار من غطاء الغبار وفرّغ الغبار منها.

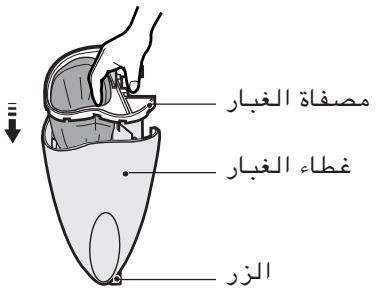

٣ ادفع مصفاة الغبار ملائما الى أعلى غطاء الغبار. تأكد من وجود مصفاة الغبار داخل الغطاء ووضعها على الدعامات.

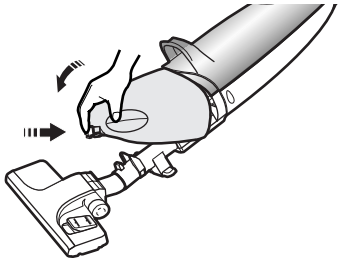

٤ ازلق أعلى غطاء الغبار الى مكانه واضغط على غطاء الغبار الى الأسفل. واضغط على الزر ويغلق غطاء الغبار الى مكانه.

الصيانة

مصفاة الغبار/مصفاة العادم

نظّف المصافي بعد كل مرة من الاستخدام. إذا كانت المصافي ضرورية للتنظيف الأكثر، اغسلها بالماء الدافئ باستخدام مسحوق غسيل عادل.
جففها تماما قبل إعادة المصافي الى مكانها في المكنسة. إذا كانت المصافي متضررة أو متسخة للغياة، بدلها.

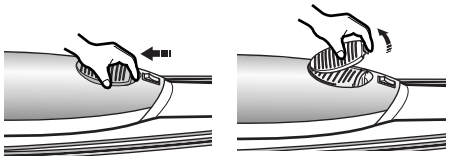

١ اسحب لفتح حجيرة المصفاة.

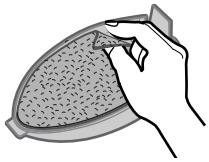

٢ اقشر لوح المركم من المصفاة.

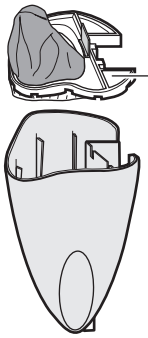

مصفاة الغبار

مصفاة المدخل

مصفاة المدخل تصفي الغبار والوسخ من الهواء الذي يدور في المكنسة الكهربائية. ولا يمكن مصفاة المدخل مرة أخرى، ولا بد من فحصها مرة كل سنة للتبديل.

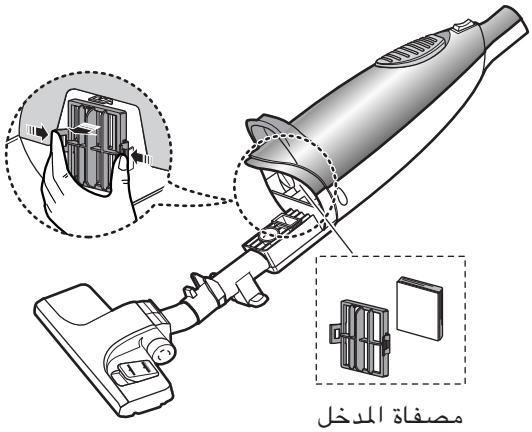

مصفاة المدخل

VC-S112-ARB 6 2/10/09, 1:15 PM

DJ68-00054K 2001.7.20 3:4 PM ˘ ` 8